


• HP56/57

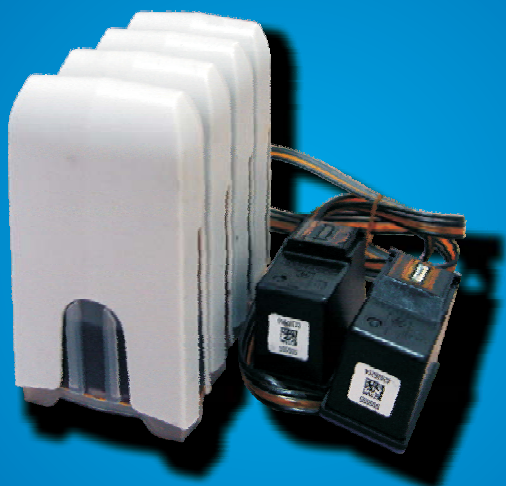

- 💧 Continuous ink system
- 💧 Continuous ink supply system
- 💧 Continuous ink flow system
- 💧 Continuous ink feed system
- 💧 Bulk ink system

Unpacking Instruction



1. CIS ink system (Continuous ink system) 1 Set
2. Pipeline Clincher or Arm Support 1 Set
3. Installation Instruction 1 Copy
4. Syringe 1 Set

Note

- 1. Not drinkable, keep it out of the reach of children**
- 2. Please do not take out the cartridges at random after installing the CIS ink system.**
- 3. Keep the ink tank and printer in the same level. Do not place the tank higher or lower than their printer**

Filling ink (only for not prefill inks)

Remove the rubber plug from the sprue of the ink cartridge, use a common syringe to connect to the sprue, pull the syringe piston for air-removing, the ink will then flow into the ink cartridge automatically. After filled, stuff the rubber plug.

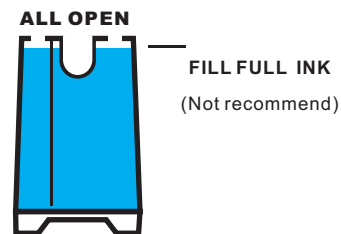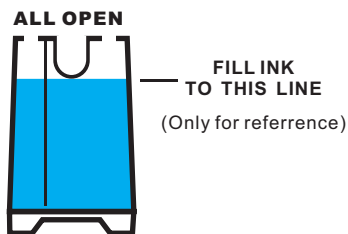



When printing uncontinuous, or fill inks into an empty CIS




Important step

Lock the tubes, draft out 'L' connector, fill full inks into the cartridges, then insert 'L' connector again.

Tank working : air balance

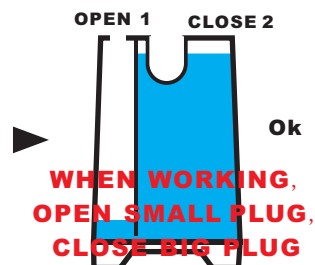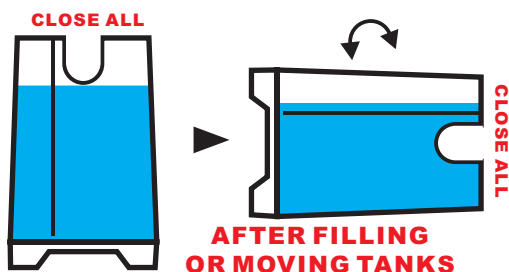


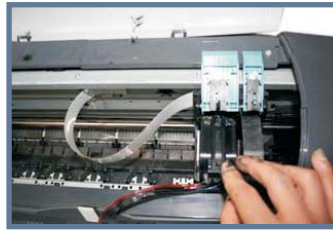

- 1 Open the cover of the ink vehicle, put out the original cartridges. Put in the cartridges of CIS ink system. Cover the lid and make sure the cartridges are in the right position.




- 2 We have installed the support arm in the cartridges. Put another short support arm in the middle of groove. Put the long support arm 3.5cm right to the short one and 10cm down.

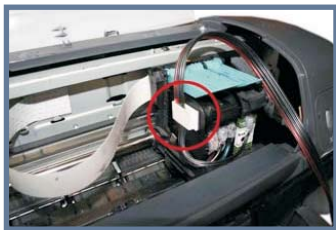

- 3 Close the tubes to the support arm by clasp, and make sure the tubes are not contorted.



- 4 Pull out the power wire, then move the Ink vehicle. Move it to the end of the left. pull the tubes straight, the tube can not be that long or contorted.

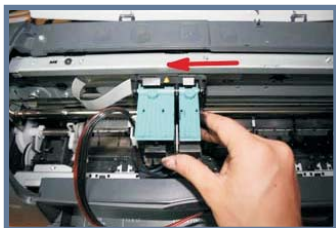


- 5 Move the ink vehicle to the left, and make sur there is not baffle. In the same way, move it to the right, and make sure it will not hit anywhere installation finished


Attention



After install CIS, the cover of the printer can not be closed well, just insert the paper to the hole as picture shows.

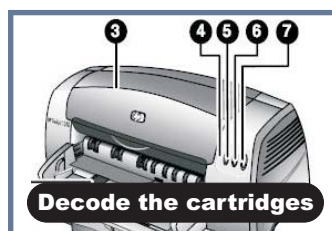

When the printer says change the cartridges, need to decode the cartridges. Just press the button 6 (restore key) till the light does not flash, then it is decoded.

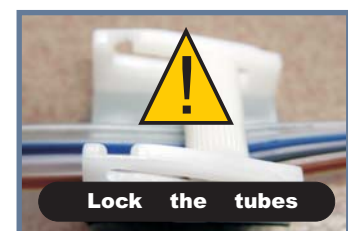

When you need move the ink tanks, or move the cartridges, please lock the tubes with the tube lock