
INSTALLATION INSTRUCTION

CIS for CAN printers

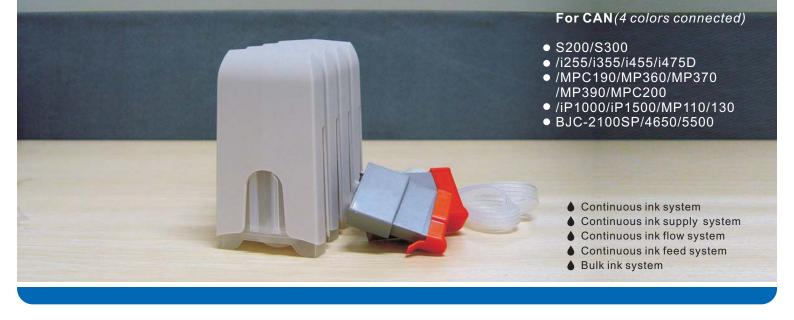

Unpacking Instruction

- 1. CIS ink system (Continuous ink system) 1 Set
- 2. Pipeline Clincher or Arm Support 1 Set
- 3. Installation Instruction 1 Copy
- 4. Syringe 1 Set

Note


- 1. Not drinkable, keep it out of the reach of children
- 2. Avoid exposure to direct sunshine and don't keep it in the high or freezing temperature.
- 3. Avoid collision and fallen down.
- 4. Please do not take out the cartridges at random after install the CIS ink system.
- 5.Using it in the temperature of 10-40°C
- 6. The CIS ink system has passed the strict compatible checking, we recommend to use our ink, to ensure the printing quality.
- 7. Mixing two different brand inks into the CIS ink system is not recommended.

8.Keep the ink tanks and printer in the same level. Do not place the tanks higher or lower than their printer

Refilling ink





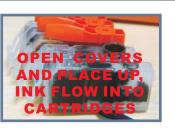



ALL OPEN FII (Not


FILL FULL INK (Not recommended)

When filling ink, remove all the rubber plugs from the sprue of the ink cartridge, use a common syringe to connect to the sprue, pull the syringe piston for air-removing, and open the covers of cartridges, hold the tanks high up, the ink will then flow into the ink cartridge automatically. After filling, stuff the rubber plugs and cartridge covers.

Tanks working

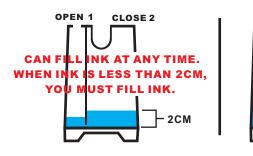

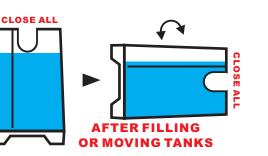

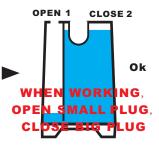







Remove the cartridge bottom cap. And put the CIS cartridges into cartridge Carriage. Fix the supporting arm as the picture shows. Measure 11 cm from the right edge of printer, 1 cm from the below edge, which forms an angle of 60°.





Place the tube through supporting arm. Move the cartridge car to left end and right end. Make sure that the tubes are not too tight or too loose.







Insert a scrip in the proper position of printer top cover as the picture shown above. Close the front cover with a sticky tap and avoid the tube being clamped tightly. Installation is finished.



Tube attention (for CAN printers)



Tube excessive long



Tube twisted



Well-installed

Reset cartridges

- If use for a long time ,the computer tells you to replace cartridge doesn't work, and the ink light lights
- 1.If the cartridges without chips, you can use software to reset.
- 2.If with chips, press the button "paper" for 5 seconds, maybe need redo several times, then the light is off, all ok.