

For EPN

- R200/R220/R300
- /RX500/RX600

- R210/R230/R310
- /R350/RX510



This packing including

- 1). Continuous ink system 1 Set
- 2). Pipeline Clincher or Arm Support 1 Set
- 3). Installation Instruction 1 Copy
- 4). Syringe 1 Set

Attention


1. Not drinkable, keep it out of the reach of children
2. Avoid exposure to direct sunshine and don't keep it at the high or freezing temperature.
3. Avoid collision and falling down.
4. Please do not take out the cartridges at random after installing the ink system.
5. Using it in the temperature of 10-40°C
6. The ink system has passed the strict compatible checking, so we suggest using our ink and cartridges to keep the printing quality.
7. Mixing two different brand inks into the ink system is not recommended.

8. Keep the ink tanks and printer in the same level. Do not place the tanks higher or lower than their printer

Refill ink


When filling ink , you should pull out the rubber plugs from the sprue of the ink cartridge, use a common syringe to connect to the sprue, pull the syringe piston for air-removing, the inks will then flow into the ink cartridge automatically. After filling, stuff the rubber plug.

When the inks of ink tanks are low than the INK LEVEL(ink image on the surface of tanks), you must need to refill inks.

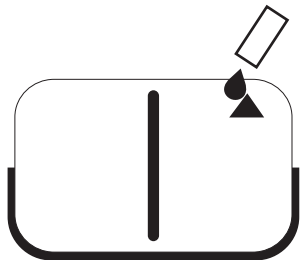

OPEN LEFT COVERS

FILL INK WITH A SYRINGE WITH NEEDLE

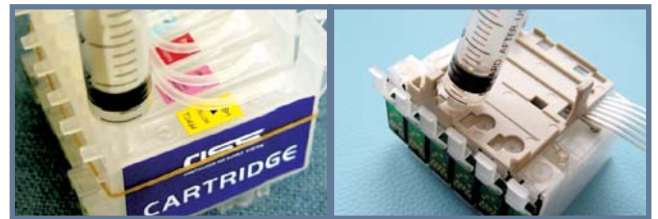



NEED REMOVE AIR WHEN FILL INK INTO EMPTY INK SYSTEM AT 1ST TIME

Tanks work :

① OPEN LEFT COVERS

② REPLACE ALL THE PLUGS to 'L' PLUGS

③ CLOSE LEFT COVERS

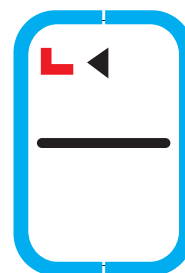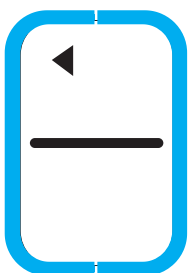

WHEN WORKS. OPEN ALL THE PLUGS ON ARROW SIDES



For EPN

- R200/R220/R300
- /RX500/RX600

- R210/R230/R310
- /R350/RX510

- 💧 Continuous ink system
- 💧 Continuous ink supply system
- 💧 Continuous ink flow system
- 💧 Continuous ink feed system
- 💧 Bulk ink system

Unpacking Instruction

1. CIS ink system (Continuous ink system) 1 Set
2. Pipeline Clincher or Arm Support 1 Set
3. Installation Instruction 1 Copy
4. Syringe 1 Set


Note

1. Not drinkable, keep it out of the reach of children
2. Avoid exposure to direct sunshine and don't keep it at the high or freezing temperature.
3. Avoid collision and falling down.
4. Please do not take out the cartridges at random after installing the CIS ink system.
5. Using it in the temperature of 10-40°C
6. The CIS ink system has passed the strict compatible checking, so we suggest using our ink and cartridges to keep the printing quality.
7. Mixing two different brand inks into the CIS ink system is not recommended.




8. Keep the ink tanks and printer in the same level. Do not place the tanks higher or lower than their printer

Refilling ink

When filling ink, you should pull out the rubber plugs from the sprue of the ink cartridge, use a common syringe to connect to the sprue, pull the syringe piston for air-removing, the inks will then flow into the ink cartridge automatically. After filling, stuff the rubber



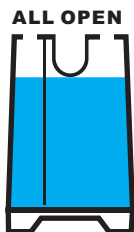


FILL INK TO THIS LINE
(Only for reference)

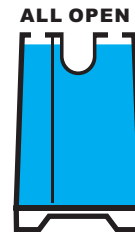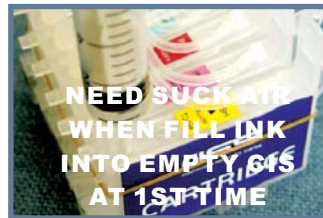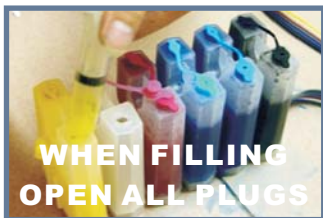

FILL FULL INK
(Not recommended)

Tanks working :

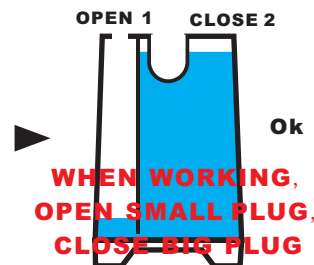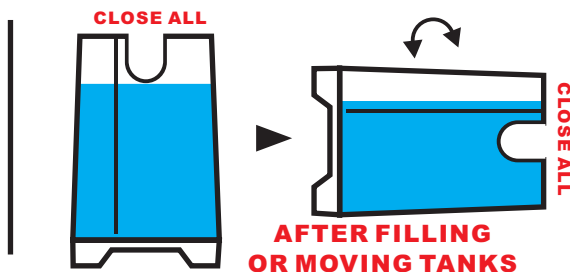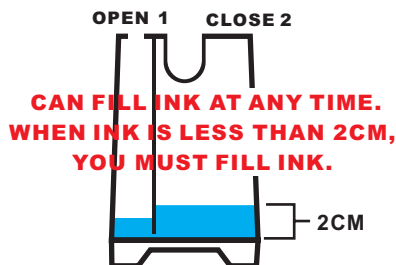



- 1 Press the "ink cartridge replace Button"
Move the cartridge to the cartridge to cartridge remove position
Unplug the power connector



- 2 Remove the original cartridges, Insert our no-sponge cartridge into printer carefully, Close the cover.



- 3 Measure 20cm from the edge of the printer, Attach supporting arm
Fix balance arm
Attach it at the right of the printer, and make sure it is parallel with the support arm

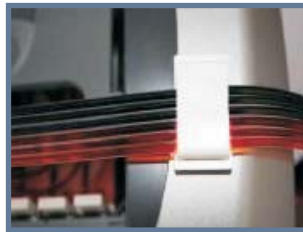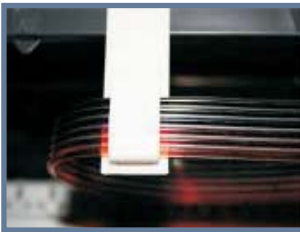


- 4 Put the tube into the Support Arm and Small Tube clamp.



- 5 Slide the cartridge car from left to right several times; make sure the tubes not too tight when cartridge is in the far left position, and not too loose which to avoid tubing block.

 Reset cartridges:



The ink will be showed less and lessr when printing, as the original cartridges.
The chips for CIS can auto reset when the printer show '0' capacity ink.
If use for a long time ,the computer tells you to replace cartridge doesn't work,
Power off the printer for 1 minute, then restart ok.