

Attention

- 1. Not drinkable, keep it out of the reach of children
- 2. Avoid exposure to direct sunshine and don't keep it at the high or freezing temperature.
- 3. Avoid collision and falling down.
- 4.Please do not take out the cartridges at random after installing the ink system.
- 5.Using it in the temperature of 10-40°C
- 6.The ink system has passed the strict compatible checking, so we suggest using our ink and cartridges to keep the printing quality.
- 7. Mixing two different brand inks into the ink system is not recommended.
- 8.Keep the ink tanks and printer in the same level. Do not place the tanks higher or lower than their printer

Refill ink

When filling ink, you should pull out the rubber plugs from the sprue of the ink cartridge, use a common syringe to connect to the sprue, pull the syringe piston for air-removing, the inks will then flow into the ink cartridge automatically. After filling, stuff the rubber plug.

When the inks of ink tanks are low than the INK LEVEL(ink image on the surface of tanks), you must need to refill inks.






OPEN LEFT COVERS
FILL INK WITH A SYRINGE WITH NEEDLE





Tanks work :

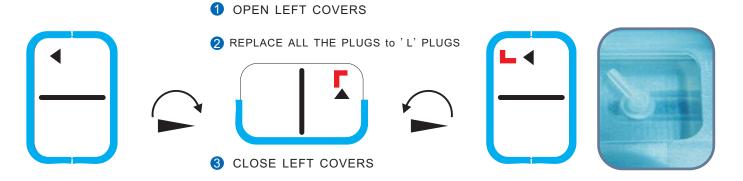



Unpacking Instruction

- 1. CIS ink system (Continuous ink system) 1 Set
- 2. Pipeline Clincher or Arm Support 1 Set
- 3. Installation Instruction 1 Copy
- 4. Syringe 1 Set

 
Note

- 1. Not drinkable, keep it out of the reach of children
- 2. Avoid exposure to direct sunshine and don't keep it at the high or freezing temperature.
- 3. Avoid collision and falling down.
- 4. Please do not take out the cartridges at random after installing the CIS ink system.
- 5.Using it in the temperature of 10-40°C
- 6.The CIS ink system has passed the strict compatible checking, so we suggest using our ink and cartridges to keep the printing quality.
- 7. Mixing two different brand inks into the CIS ink system is not recommended.

8.Keep the ink tanks and printer in the same level. Do not place the tanks higher or lower than their printer


Refilling ink

When filling ink, you should pull out the rubber plugs from the sprue of the ink cartridge, use a common syringe to connect to the sprue, pull the syringe piston for air-removing, the inks will then flow into the ink cartridge automatically. After filling, stuff the rubber









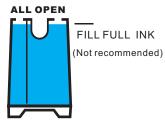

Tanks working:



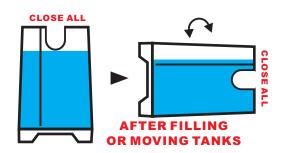

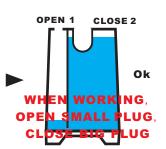

1 Press the "ink cartridge replace Button"

Move the cartridge to the cartridge to cartridge remove position

Uplug the power connector









Remove out the original cartridges, then place down each cartridge according to the color, in the meantime, make every cartridge in the correct position.

Remove the cartridge cart back and place the cartridges down as show in picture, then click the cartridges to the right position.









3 Rip the label on the balance arm
Stick the Support arm at 25cm distance from the side of the printer
Fix the balance arm stick on the support arm as show on the picture, Rip the label on the shortest arm ,And
Stick it on the right side of the printer, but need to keep it in the same horizontal line as show in the picture









Clip the tubes in the clip
Adjust the tube length and move the cartridge car. Insure there will no block and collision when the tubes
moving with cartridge car .Insure there's plenty length of tube to make the cartridge cart can thoroughly move
to the left side.







The tube is excessive long, it is not ok. The tube is twist ,it is not ok. Finish instlaalation, now ok to work.

Reset cartridges:

